


■ 安裝方式選項 MOTOR MOUNTING SELECTIONS:

● S-止付式

S-Set screw fixed type

- 1.馬達軸心鍵與減速機入力軸鍵槽對齊置入。
- 2.馬達與減速機結合後將馬達上4根螺絲鎖緊。
- 3.使用T型板手將減速機入力軸內的止付螺絲鎖緊即可。

- 1.Place motor shaft key and reducer input shaft key way in a straight line, and insert motor shaft into reducer input shaft.
- 2.After connection of motor and reducer, tighten four screws into hex-socket cap screw holes.
- 3.Fix the set screw on reducer input shaft by T-type spanner.

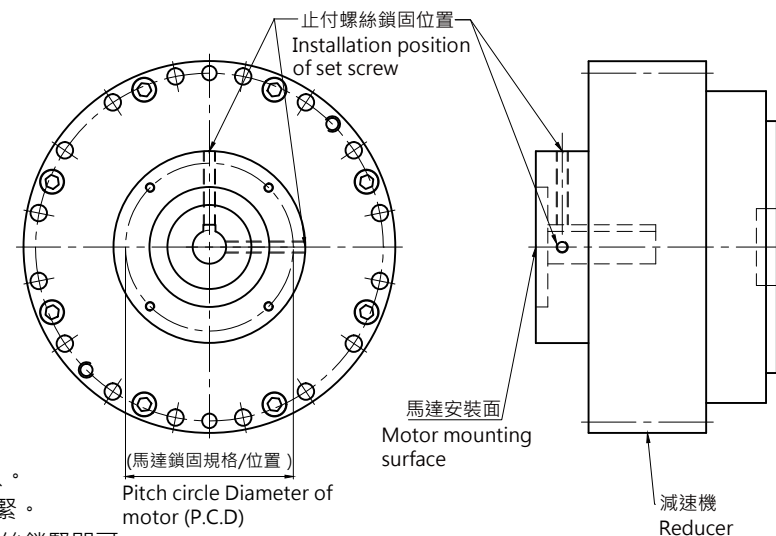


● L-束緊式:

L-Clamp fixed type


- 1.馬達軸心鍵與減速機入力軸鍵槽對齊置入。
- 2.馬達與減速機結合後，將馬達上4根螺絲鎖緊。
- 3.使用T型板手將入力軸束緊環鎖緊即可。

- 1.Place motor shaft key and reducer input shaft key way in a straight line, and insert motor shaft into reducer input shaft.
- 2.After connection of motor and reducer, tighten four screws into hex-socket cap screw holes.
- 3.Tighten the clamp of reducer input shaft by T-type spanner.

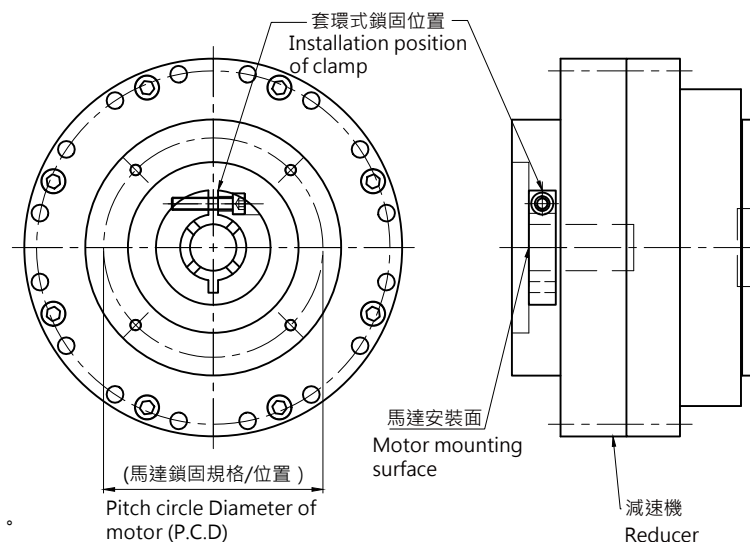

出力方式：P-有蓋


Output type : P-with cover

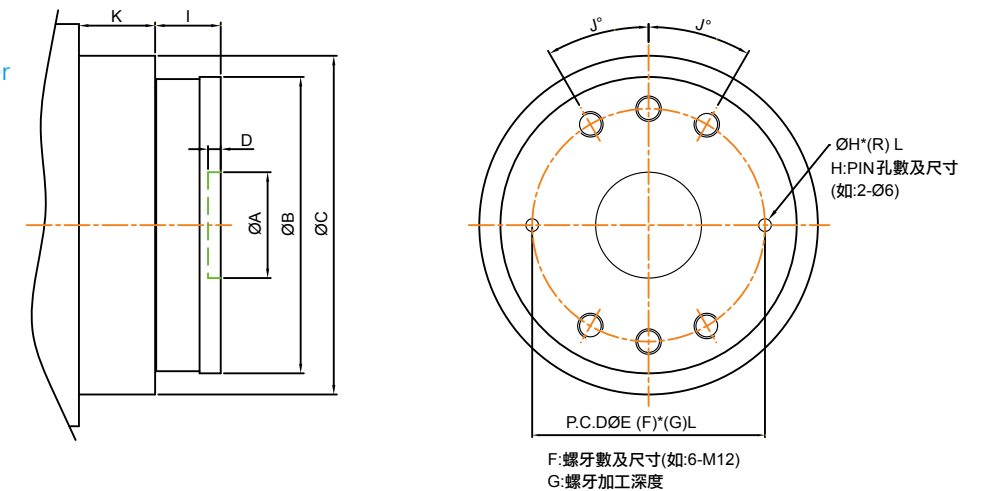

Model TTRAD	A	B	C	D	E	F	G	H	R	I	K	J
7E	28	100	106	4	80	6-M8	12	1-Φ6	6	17	21	25
25E	40	110	130	6	90	4-M10	15	2-Φ6	10	21.5	25	30
45E	50	140	160	6	110	6-M12	18	2-Φ6	10	31	36	30
135E	80	180	228	6	142	9-M12	18	1-Φ8	15	25	47.5	20
165E	100	210	240	8	145	6-M16	24	1-Φ8	20	30	51	11
325E	130	250	284	8	224	9-M16	24	1-Φ8	15	36	63.5	20
450E	155	295	328	10	250	9-M16	24	1-Φ10	15	45	64	25

出力方式：S-出力軸

Output type : S-Shaft

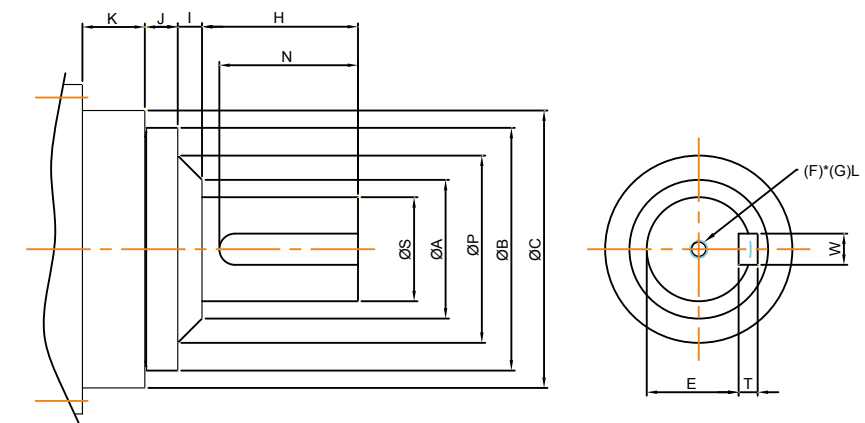

Model TTRAD	K	J	I	H	N	A	P	B	C	S	W	T	E	F	G
7E	21	12	5	35	30	40	50	86	106	28	8	7	24	M8	15
25E	25	12	5	55	49	54	64	105	130	38	10	8	33	M8	15
45E	36	15	5	90	80	80	90	135	160	60	18	11	53	M10	18
135E	47.5	25	10	90	80	80	100	145	228	60	18	11	53	M10	18
165E	51	25	10	105	95	90	115	204	240	70	20	12	62.5	M12	24
325E	63.5	30	10	130	120	110	140	245	284	90	25	14	81	M16	30
450E	64	35	10	165	155	120	175	275	328	100	28	16	90	M20	40