


■ MX 系列 尺寸圖 / 表 L1

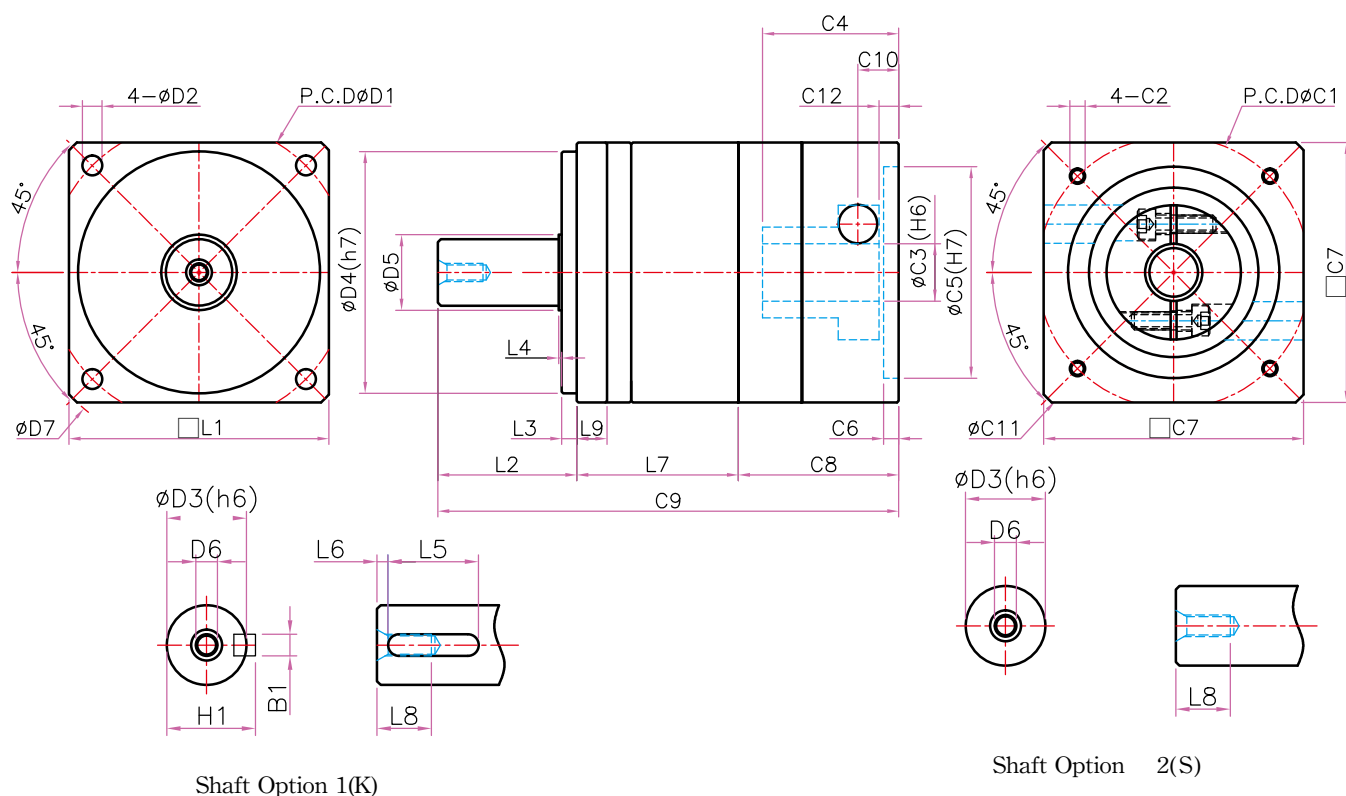

(單位:mm)

Size(mm)	MX40-L1	MX60-L1	MX90-L1	MX120-L1	MX150-L1	MX180-L1	MX220-L1
D1	50	70	100	145	165	215	250
D2	3.5	5.5	6.5	8.8	11	13	17
D3	13	16	22	32	38	50	75
D4	35	50	80	110	130	160	180
D5	15	17	25	35	40	60	80
D6	M4x0.7P	M5x0.8P	M6x1.0P	M8x1.25P	M12x1.75P	M12x1.75P	M20x2.5P
D7	60	80	118	160	190	245	292
L1	46	62	86	120	142	182	220
L2	26	33	46	69.5	75	95	123
L3	5.5	5	5	10	4	10	15
L4	1	1.5	1	0.5	3	2	3
L5	15	20	25	40	45	70	90
L6	2	3	3	3	5	6	7
L7	33	43	53.5	70.5	90	95.5	123.5
L8	8	12	15	20	32	42	52
L9	9.5	10	10	15	15	15	20
C1	46	70	90	145	200	200	235
C2	M4x0.7P	M5x0.8P	M6x1.0P	M8x1.25P	M12x1.75P	M12x1.75P	M12x1.75P
C3	5~8	6~14	14~19	16~24	19~42	19~42	35~55
C4	26	31	41	66	88.5	85	128
C5	30	50	70	110	114.3	114.3	200
C6	4	3.5	5	7	6	10	10
C7	46	62	86	120	176	182	220
C8	32.5	37	49.5	77	98	100	148
C9	91.5	113	149	217	263	290.5	394.5
C10	11	12	15	28.5	47	33.5	44
C11	60	80	118	160	240	240	292
C12	6	6	7	20	35	17	27.5
B1	4	5	6	10	10	14	20
H1	14.5	18	24.5	35	41	53.5	79.5

以上C1~C12為標準的連接法蘭尺寸，實際尺寸會因馬達型號不同而變動，入力馬達記號如附表第149-150頁