


■ MX 系列 尺寸圖/表 L2

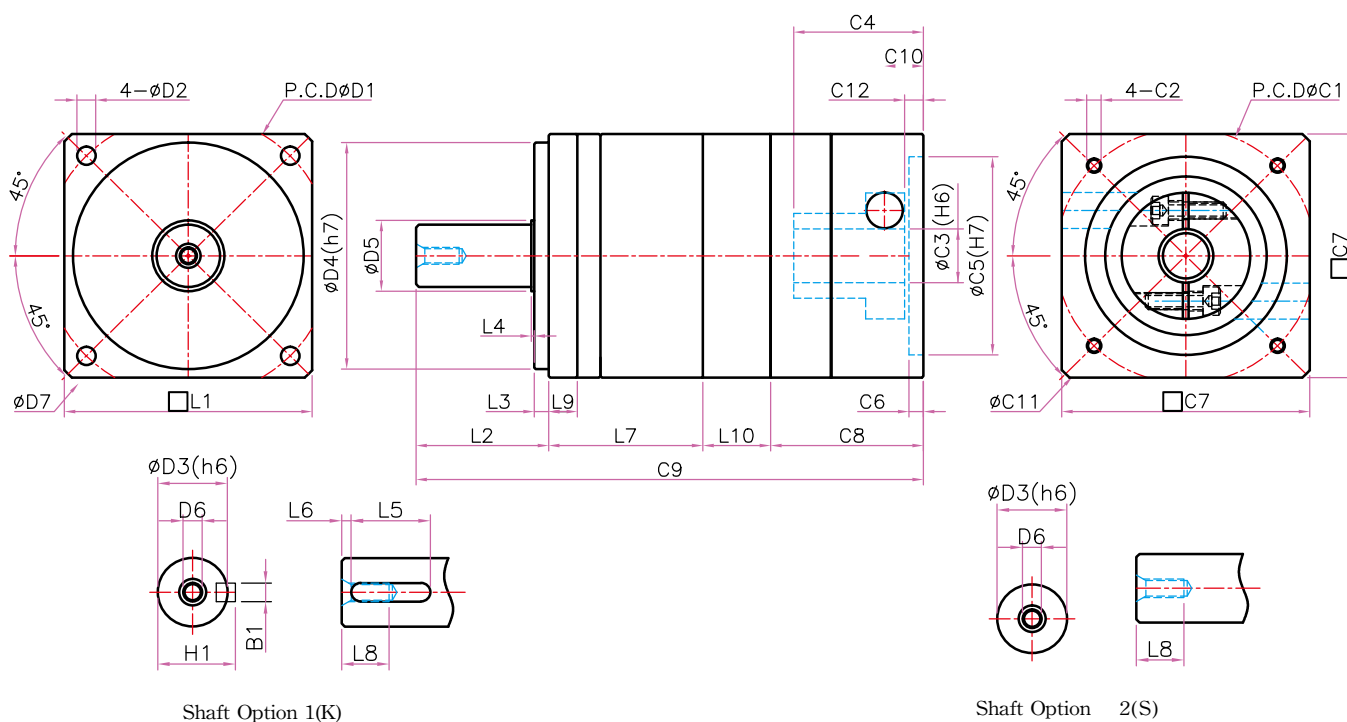

(單位:mm)

Size(mm)	MX40-L2	MX60-L2	MX90-L2	MX120-L2	MX150-L2	MX180-L2
D1	50	70	100	145	165	215
D2	3.5	5.5	6.5	8.8	11	13
D3	13	16	22	32	38	50
D4	35	50	80	110	130	160
D5	15	17	25	35	40	60
D6	M4x0.7P	M5x0.8P	M6x1.0P	M8x1.25P	M12x1.75P	M12x1.75P
D7	60	80	118	160	190	245
L1	46	62	86	120	142	182
L2	26	33	46	69.5	75	95
L3	5.5	5	5	10	4	10
L4	1	1.5	1	0.5	3	2
L5	15	20	25	40	45	70
L6	2	3	3	3	5	6
L7	33	43	53.5	70.5	90	95.5
L8	8	12	15	20	32	42
L9	9.5	10	10	15	15	15
L10	19	16	23.5	27.2	46	51.5
C1	46	70	90	145	200	200
C2	M4x0.7P	M5x0.8P	M6x1.0P	M8x1.25P	M12x1.75P	M12x1.75P
C3	5~8	6~14	14~19	16~24	19~42	19~42
C4	26	31	41	66	88.5	85
C5	30	50	70	110	114.3	114.3
C6	4	3.5	5	7	6	10
C7	46	62	86	120	176	182
C8	32.5	37	49.5	77	98	100
C9	110.5	129	172.5	244.2	309	342
C10	11	12	15	28.5	47	33.5
C11	60	80	118	160	240	240
C12	6	6	7	20	35	17
B1	4	5	6	10	10	14
H1	14.5	18	24.5	35	41	53.5

以上C1~C12為標準的連接法蘭尺寸，實際尺寸會因馬達型號不同而變動，入力馬達記號如附表第149-150頁